

HD48...07TFP... - HD4907TFP...



ACTIVE AND PASSIVE TEMPERATURE TRANSMITTERS FOR SOLAR PANELS

HD48... active and HD49... passive are temperature transmitters for solar panels. All models are available as well with LCD display (opz. L). They are supplied with a Ø 30 x 7.5 mm disk shaped 1/3 DIN Pt100 sensor.

HD48... is available with active 4...20 mA or 0...10 V analogue output, or with only RS485 MODBUS-RTU output.



HD49... is available with passive (2-wire) 4..20 mA output. Versions with analogue output provide a signal suitable to be transmitted to a remote display, a recorder or a PLC. The versions with RS485 output are suitable for connection to a PC or a PLC.


- Measuring range: -40...+85 °C
- Default analog output:
 HD4807TFP..., HD4907TFP...: 4...20 mA = -40...+85 °C
 HD48V07TFP...: 0...10 Vdc = -40...+85 °C
- Working temperature of the electronics: -20 °C...+60 °C.
- Power supply: 18...40 Vdc or 24 Vac for models HD48...
 12...30 Vdc for models with MODBUS-RTU output
 12...40 Vdc for models HD49...

ELECTRICAL CONNECTIONS

HD48... series with analogue output


Power the instrument as shown in the below connection schemes, the power supply terminals are marked as +Vcc and GND.

The output signal is available between Ta and AGND terminals for the HD4807TFP... and HD48V07TFP... transmitters.

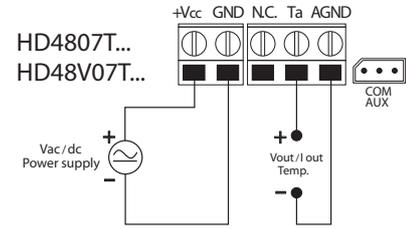

HD48...series with RS485 output

Connect the instrument as shown in the below connection schemes, the power supply terminals are marked as +Vcc and GND.

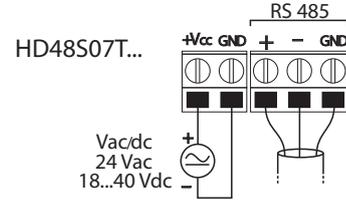


Thanks to the RS485 output, several instruments can be connected to form a network. The instruments are connected in a sequence through a shielded cable with twisted pair for signals and a third wire for the mass.

HD49... series

Follow the connection schemes shown below, the maximum load resistance that can be connected to each 4...20 mA output depends on the power supply Vcc applied, according to the relation:

$$R_{Lmax} = (Vcc - 12) / 0.022, \text{ e.g. if } Vcc = 24Vdc \text{ the max load is } R_{Lmax} = 545 \text{ ohm}$$

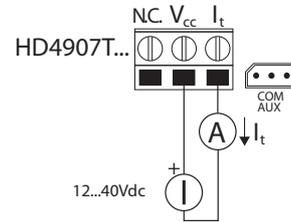

ORDERING CODES

HD48
HD49

07TFP.

Display
Blank = without LCD
L = with LCD

Cable length
5 = 5 m
10 = 10 m

Output (only for HD48...)

Blank = 4...20 mA analog output
V = 0...10 Vdc analog output
S = RS485 MODBUS-RTU output only

ACCESSORIES

CP27: PC connecting cable for the configuration of the transmitter. With built-in RS232/USB converter. 3-pole connector on transmitter side and A-type USB connector on PC side. For versions with analogue output.

RS48: PC connecting cable for the configuration of the transmitter. With built-in RS485/USB converter. 3 open wires on transmitter side and A-type USB connector on PC side. For versions with RS485 output.

HD4817CAL: software for the configuration of the transmitters. Downloadable from our website, for Windows® operating systems.